snow peak
natural lifestyle creator since1958

取扱説明書 Ver 1.00

SCS-150 ランダー ブラック

このたびはスノーピーク製品をお買い上げいただき誠にありがとうございます。この商品は調理用の鍋です。安全にご使用いただくためにも必ずこの取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。製品には万全を期しておりますが、フィールドでご使用する前に安全な場所で広げ、取扱方法の確認をしてください。説明内容で理解できない点及び製品に不具合が確認された際には、直ちに使用を中止しご購入いただきました販売店もしくは弊社ユーザーサービスまでお問い合わせください。

■各部の名称

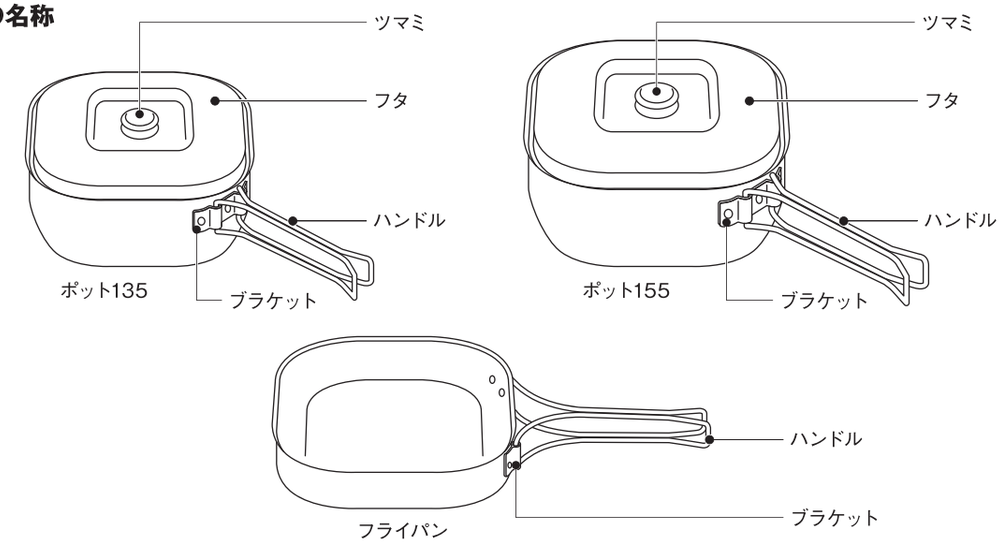

ご使用の前に

よく読んで予測される事故を回避し安全にご使用ください。

⚠警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します

⚠注意 ケガや本体破損、物品破損として拡大損害の原因となる行為

⚠警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します

- ●空焚きは絶対にしないでください。火災や火傷及び製品破損の原因になります。
- ●使用中や使用後しばらくは本体が大変熱くなっています。火傷の恐れがありますので、十分に注意し、特に幼児が触れて大事故にならないように注意してください。
- ●天ぷらなどの揚げ物料理はしないでください。小型鍋の為、油に引火しやすく火傷や火災を起こす恐れがあります。

⚠注意 ケガや本体破損、物品破損として拡大損害の原因となる行為

- ●お使いになる前に、中性洗剤と柔らかいスポンジ等で、よく洗ってからご使用ください。
- ●調理の際は水平で安定した場所を選び、フライパン・鍋はゴトクの中央に置いてください。
- ●本体・ハンドルは金属製です。使用中や使用後しばらくは高温になり火傷の恐れがあります。絶対に素手では触れず、必ず鍋ツカミや厚手のグローブを着用し取り扱ってください。
- ●炎が底面よりも大きくならない様に、火力を調節してください。ハンドルが熱くなり火傷の恐れがあります。
- ●電子レンジ、オーブンで使用しないでください。破損の原因になります。
- ●焚火や炭火で使用する場合は、炭火の熱や薪の炎が、遠火になる様に火力を調節してご使用ください。ブラケットやハンドルが熱くなり火傷の恐れがあります。また、フタの上に薪や炭を乗せないでください。破損の原因となります。
- ●満水状態で使用しないでください。沸騰すると吹きこぼれやすくなります。
- ●ポット155で3合以上の炊飯を行うと、より多くの吹きこぼれが生じる可能性があります。ご使用になる燃焼器具の故障につながる恐れがありますので、ご注意ください。
- ●料理を長時間にわたり（一昼夜以上）保存しないでください。腐食の原因となります。
- ●ハンドルは回転可動しますので、持ち運ぶ際は回転しないようしっかりと持ってください。
- ●熱した本体に冷水をかける等、急激な温度変化を与えると、変形する場合がありますので、お止めください。
- ●本体の表面で材料を刻んだりしないでください。フッ素樹脂に傷をつけます。
- ●ポット155、ポット135、フライパン、全てにフッ素樹脂加工が施されています。金属製のヘラやお玉など、フッ素樹脂を傷付けやすい調理器具は使わないでください。
- ●ツマミやブラケットにガタツキが無いか使用毎に確認してください。ガタツキが発生している場合は、使用を止めてください。
- ●洗う際は金属タワシや磨き粉を含む洗剤で洗わないでください。表面を傷付け、腐食や塗膜剥離の原因となります。同様に焦げ付き等を落とす際も、金属製の鋭利な物を使用しないでください。
- ●ご使用後は、よく洗って水分を拭き取り乾燥させてください。

■収納方法

●収納の際は下図の順番で収納してください。

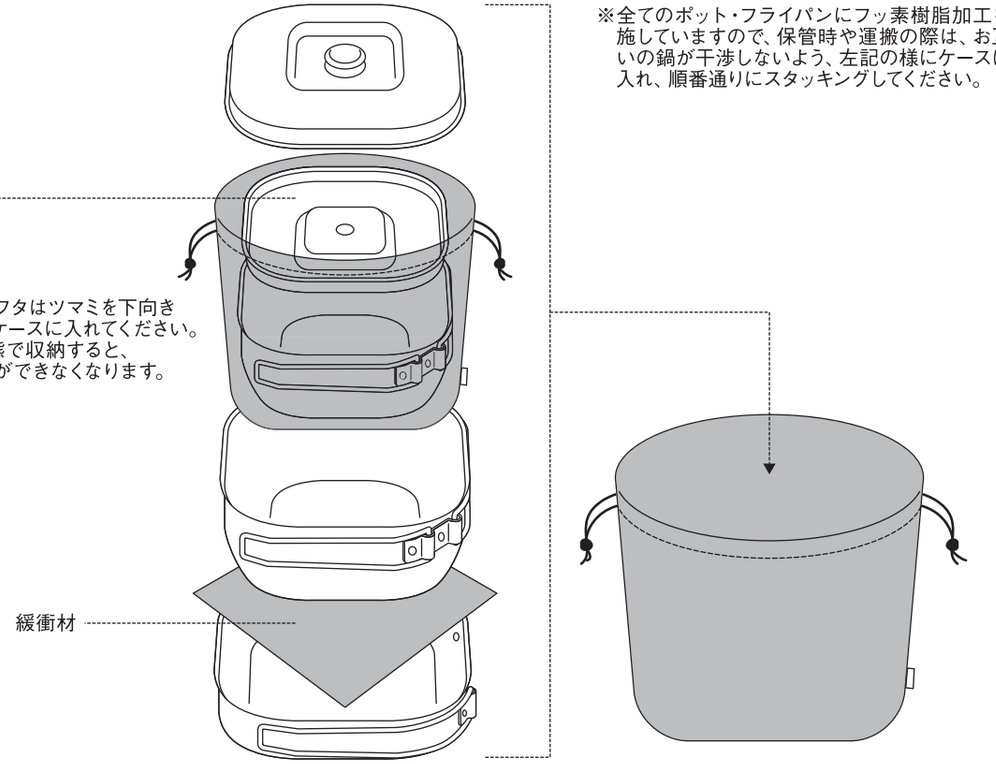

※全てのポット・フライパンにフッ素樹脂加工を施していますので、保管時や運搬の際は、お互いの鍋が干渉しないよう、左記の様にケースに入れ、順番通りにスタッキングしてください。

■品質保証について

お買い求めいただきました製品は万全を期してますが万一不備な点がございましたら、お買い求めの販売店または弊社までご連絡ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適正な価格で修理させていただきます。修理・交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は保証、修理できない場合もありますので、あらかじめご了承ください。

1.取扱説明書に従わなかったと判断した場合。
2.素材の経年劣化による製品の寿命。
3.改造及び粗雑な扱いによる製品の故障。
4.不測の事故による製品の故障。
5.その他製造上の欠陥以外による製品の故障。
6.ゴミやサビによる故障。
7.分解したことによる不具合の発生または破損。
8.落下やその他の衝撃による部品の変形や破損による不具合。
9.消耗品の劣化、破損、故障及び付随する不具合。
10.他社製品との組合せによる故障。

■修理について

- ●本格的な修理が必要な場合は、お買い求めになった販売店または弊社ユーザーサービス係までお問い合わせください。
- ●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- ●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- ●修理品の運賃並びに修理費については以下のように規定させていただきます。

1.保証対象の場合：往復運賃並びに修理費は弊社にて負担いたします。
2.保証対象以外の場合：往復運賃並びに修理費は、お客様のご負担とさせていただきます。

■スペック

- ●セット内容・サイズ：
  ポット155（内寸155mm×155mm×90mm・1,700ml）
  ポット135（内寸135mm×135mm×75mm・1,070ml）
  フライパン（内寸155mm×155mm×48mm・850ml）
- ●材質：
  本体／アルミアルマイト・フッ素樹脂加工
  フタ／アルミアルマイト・（焼付塗装）
- ●重量：730g（メッシュケース含まず）

不明な点やお気付きの点がございましたら、販売店または弊社ユーザーサービス係までお問い合わせください。
スノーピークユーザーサービス係
0120-010-660（9:00～17:00）
E-mail:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
tel:0256-46-5858 fax:0256-46-5860
www.snowpeak.co.jp

MADE IN JAPAN

snow peak
natural lifestyle creator since1958

Instruction manual Ver 1.00

SCS-150 Lander 3 Cookset

Thank you for your purchase of this Snow Peak product. These instructions will help you understand how to properly use and care for your new cookset. Please read the instructions carefully before use and keep for future reference.
Please confirm that you have received all the necessary components. Make sure you fully understand these instructions and function of this product before you use in the field. If the product is damaged upon purchase, please stop using it immediately and contact Snow Peak customer service or the Snow Peak Dealer where you purchased this product.

■Name of each part

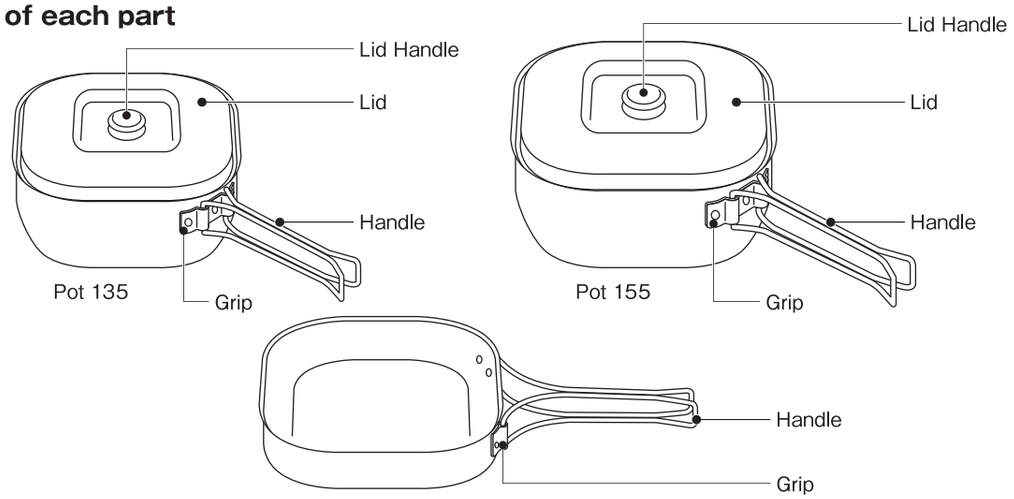

Before use

Please read and understand these instructions before use.

⚠Caution **Action may lead to a serious accident depending on the situation.**

⚠Warning **Action may cause injury, damage to product or other valuables.**

⚠Caution **Action may lead to a serious accident depending on the situation.**

- ●Do not use the pot or fry pan without anything in it. This may cause permanent damage to the product or fire. In the case of melting snow be sure to add a bit of water. If no water is added this could cause permanent deformation of the pot or pan.
- ●During and after use, the pot is very hot. Please be careful to not burn yourself. Be careful when handling during use. Keep out of reach of children to avoid injury or burning by touching the pot.
- ●When using the pot to deep fry food, please pay extra attention to avoid burns or fire from super-heated oil.

⚠Warning **Action may cause injury, damage to product or other valuables.**

- ●Wash thoroughly with soft sponge and mild detergent before initial use.
- ●Choose a stable, level area when cooking with this product. Place the flying pan or pot on the center of the stove trivet.
- ●The pot/lid/handle are all made from metal. These parts become very hot during and after use; if not careful during use this could result in serious burns to hands. Do not touch parts with your hands without the use of an oven mitten.
- ●When using on a stove, adjust flame so that only the bottom is being heated, avoiding larger flames that are greater than the pot bottom. If the flame is too large, grip or handle will be too hot and may cause burns when gripped.
- ●Do not use this product in a microwave oven or oven. This may result in permanent damage to product.
- ●When using on open fire or charcoal, adjust the flame to avoid larger flames. If the flame is too large, the grip or handle will be too hot and may cause burns. Also do not put wood or charcoal on the lid. It may cause breakage.
- ●Do not fill the pot completely with water. When water boils, it may boil over.
- ●If you boil rice more than 3 cups in Pot 155, it may boil over easily. Please be aware of your stoves to avoid any damage.
- ●Do not store food in this product for long periods of time (more than one day). This may cause corrosion.
- ●The handle can be folded to take up minimal space. However during use always hold both handles together firmly when lifting or carrying pot and fry pan to avoid the handles from collapsing.
- ●If you pour cold water into the pot while it is still hot may cause permanent deformation to its shape. Please avoid rapidly changing the temperature of the pot.
- ●Do not cut foods on the surface of this product. It may damage the fluorine resin coating.
- ●Fluorine resin coating is applied to Pot 155, Spot 135, Flying pan. Do not use a metal spatula or ladle because this may scratch or damage the fluorine resin.
- ●Before each use, check the lid handle and grips to make sure their tight. If they feel loose, stop using product.
- ●Do not use a metal brush or polishing powder. This may damage the surface of the pot or pan and could cause corrosion or peeling of the coating. Do not use sharp metal objects when cleaning your cookset, this could damage the metal cookset.
- ●After use, wash and dry it thoroughly.

■How to install

●Store the products in the orders as shown in the drawing below.

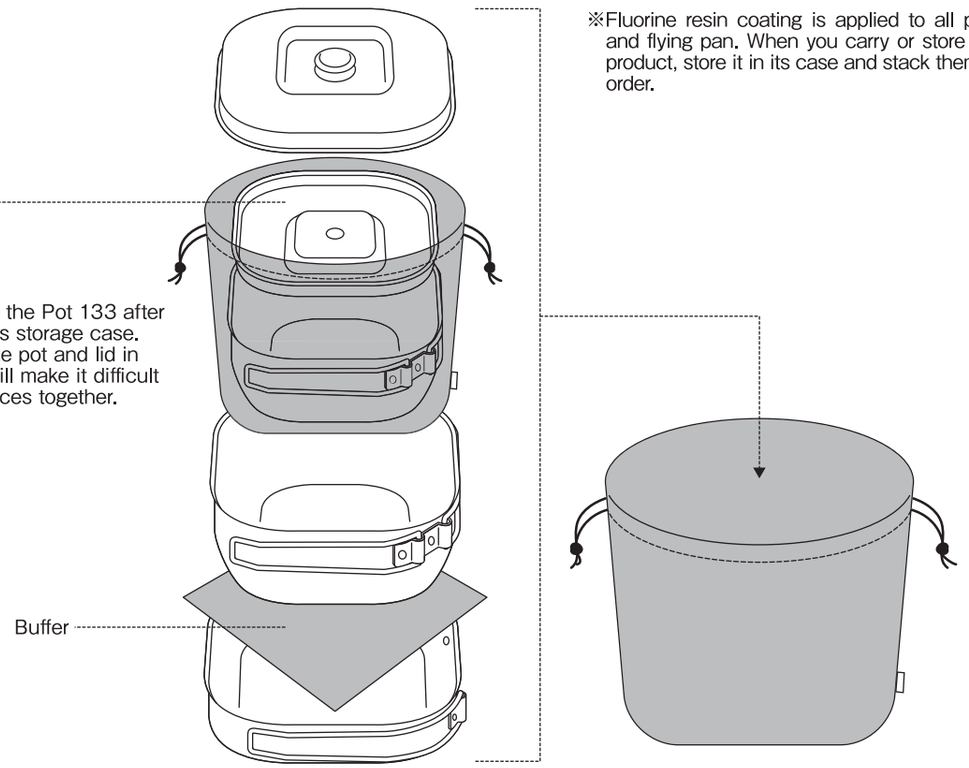
※Fluorine resin coating is applied to all pots and flying pan. When you carry or store the product, store it in its case and stack them in order.
●Put the lid on the Pot 133 after placing it in its storage case.
※If you store the pot and lid in the case, it will make it difficult to nest all pieces together.
Buffer

■Warranty

Snow Peak guarantees its products against manufacture defects. We have made every effort to insure our products are free from any defect or flaws. In the rare event that you feel this product has a defect or needs repair please contact the Snow Peak customer service or go to your local Snow Peak dealer where you purchased this product. Snow Peak will replace or repair any defect that may have been caused due to manufacturing. Snow Peak will not be able to replace this product if any damages occurred due to any of the following:

1. Material quality has changed due to aging of product.
2. Damage by altering or careless handling.
3. Damage due to improper handling which is prohibited as shown in instruction.
4. Product failure due to user accidents.
5. Any damage except with product defects due to manufacturing.
6. Damage by dirt and rust.
7. Damage by dismantling.
8. Deformation and failure of parts damaged by dropping or other similar incidents.
9. Product failure due to wear and tear by user.
10. Damage caused by improper use with other products.

■Repair

- ●For repairs, please contact the retailer where you purchased the product or Snow Peak user service.
- ●When you ask for repair, please make sure that the product is dry and clean.
- ●Please attach a memo or some kind of tag indicating the needed repair and also please write details of when and how the damaged occurred.
- ●We set for the shipping cost and repair fee for the repair as follows.

1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak.
2. Outside warranty: Return shipping cost and repair fee will be covered by the user.

■Specifications

- ●Set contents･Size:
  Pot 155(inside 155×155×90mm･1,700ml), 6.1" x 6.1" x 3.5" 1.8 qt.、
  Pot 135(inside 135×135×75mm･1,070ml) 5.3" x 5.3" x 3" . 1.1 qt.、
  Flying pan(inside 155×155×48mm･850ml)6.1" x 6.1" x 1.5". 29 oz.
- ●Material:
  Pot/aluminum alumite, fluorine resin coating,
  Lid/ aluminum alumite, ceramic coating,
- ●Weight:730g(without mesh case)1.6 lbs.

Snow Peak Inc.
410 14th Ave.,Portland Oregon,97209,USA
TEL:503-697-3330 FAX:503-699-1396
www.snowpeak.com

MADE IN JAPAN